



Polarap consists of **four PCM belts** and a **TLX4 thermal cover**.

Pre-conditioning: After installation, condition for a minimum of 2 hours before shipping.

The first set of belts (**saddle belts - long**) is to go up and over the length of the load. The central section of the belt contains no PCM pouches.

The second set of belts (**full belts - short**) is to go up and over the width of the pallet.

- 1 Remove the longer saddle belts from the box. Place the belt on the top of the load and unfold across the width of the load and down the walls. The belts may overlap slightly.




- 2 Remove the shorter full belt from the box. Remove the belt from its packaging. Place the belt on the top of the load and unfold the belt along the length of the load and down the walls. The belts may overlap slightly.



3 To hold the belts in position, lightly wind stretch wrap around the walls.



4 Remove the TLX4 thermal cover from its packaging and fit it over the pallet.

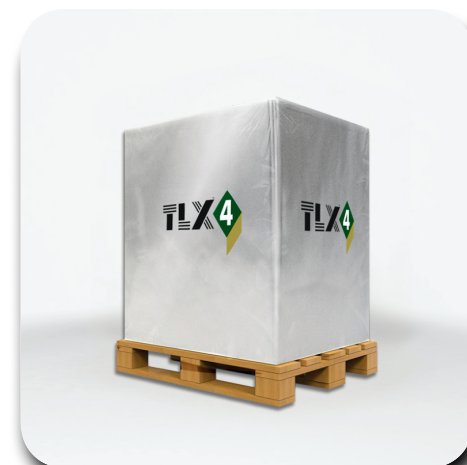

5 **IMPORTANT:** Secure the TLX4 thermal cover around the base with stretch wrap



- To avoid damaging the belt and PCM layer, do not use bladed items to remove the belt packaging. Handle with care.
- Avoid loading on top of the PCM belt.
- Secure with stretch wrap only, do not use wire, cord etc.
- To clean, wipe down with water and mild soap.
- Contains PCM which phases between liquid and solid.
- Do not bend when the PCM is frozen.
- If the belt is damaged dispose to an approved waste disposal plant.